

Oscilloscope

USER MANUAL

Dual Trace Oscilloscope

Members Of The Family

CONTENTS

	PAGE
1.GENERAL	1
1.1Description.....	1
1.2Features	1
2.TECHNICAL SPECIFICATIONS	2
3.PRECAUTIONS BEFORE OPERATING THE OSCILLOSCOPE	6
3.1 Unpacking the Oscilloscope	6
3.2 Checking the Line voltage	6
3.3 Environment.....	7
3.4 Equipment Installation and Operation.....	7
3.5 CRT Intensity.....	7
3.6 Withstanding Voltages of Input Terminals.....	7
4.OPERATION METHOD.....	11
4.1 Introduction of Front Panel.....	11
4.2 Introduction of Rear Panel.....	15
4.3 Basic Operation-Single channel Operation.....	16
4.4 Dual-Channel Operation.....	17
4.5 ADD Operation.....	18
4.6 Triggering.....	18
4.7 TIME/div control.....	21
4.8 Sweep Magnification.....	21
4.9 X-Y Operation.....	22
4.10 Calibration of Probe.....	23
5. CURSOR READOUT OPERATION.....	24
5.1 Read Out Panel.....	24
5.2 Cursor measurement.....	25
6. MAINTENANCE.....	30
6.1 Fuse replacement.....	30
6.2 Cleaning.....	30
7.BLOCK DIAGRAM.....	31

ii

SAFETY TERMS AND SYMBOLS

These terms may appear in this manual or on the product:



WARNING. Warning statements identify condition or practices that could result in injury or loss of life.



CAUTION. Caution statements identify conditions or practices that could result in damage to this product or other property.

The following symbols may appear in this manual or on the product:




DANGER
High Voltage



ATTENTION
refer to Manual



Protective
Conductor
Terminal



Earth(ground)
Terminal

1.GENERAL

1.1 Description

The 620R family oscilloscope are dual-channel oscilloscope with maximum sensitivity of 1mV/div. The time base provides a maximum sweep time of 0.2 uS/div .When magnified by 10,the sweep speed is 20ns/div.The vertical deflection system has two input channels .Each channel has 12 basic deflection factors from 5mV to 20V per division ,it can expanded to 1mV/div by pull out x5MAG button .Each of these oscilloscope employs a 6- inch rectangular type cathode-ray tube with internal graticule.620R/640R has cursor readout function which can display voltage, time, frequency etc. information on screen. These oscilloscopes are sturdy, easy to operate and exhibits high operational reliability.

1.2 Features

L) High intensity CRT with high acceleration voltage:

The CRT is a high beam transmission,high intensity type with a high acceleration voltage of 2KV for 620B/620BF 5620NF/620Rand 12KV for 640B/650B/640BF/650BF/640R/650R.It displays clear readable traces even at high sweep speeds.

2) A trigger level lock function which makes the triggering adjustment unnecessary.

3) Alternate triggering:

Even an observation of two waveforms of different frequencies,the waveform of the each channel is stably triggered.

4) TV sync triggering:

The oscilloscope has a sync separator circuit for triggering of TV-V and TV-H signals.

5) CHI Output:

Terminated 50 ohm output of channel 1 signal available on rear panel for driving frequency counter or other instruments.

6) Z-Axis Input:

Intensity modulation capability permits time or frequency markers to be added.Trace blank with positive signal,TTL compatible.

7) X-Y operation:

Set the switch to X-Y.Then the instrument works as an X-Y oscilloscope.CHI can be applied as horizontal deflection (X-axis) while CH2 provide vertical deflection(Y-axis).

1

2.TECHNICAL SPECIFICATIONS

Table one

MODEL		20MHz OSCILLOSCOPE	40MHz /50MHz OSCILLOSCOPE
SPECIFICATIONS		620B/5620NF/620BF/620R	640B/650B/640BF/650BF/640R/650R
VERTICAL AXIS	Sensitivity	5mV~20V/DIV,12steps in 1-2-5sequence (5620NF: 5mV-5V/DIV, 10steps in 1-2-5sequence)	
	Sensitivity accuracy	$\leq \pm 3\%$ (x5MAG: $\leq \pm 5\%$) (10° C-35° C) (5620NF:Devoid)	
	Vernier Vertical sensitivity	Continuously variable to 1/2.5 or less than panel-indicated value.	
	Frequency bandwidth	DC~20MHz(x5 MAG:DC~7MHz)	DC~40MHz(x5MAG:DC~15MHz)
		AC coupling:Low limit frequency 10Hz.(With reference to 100KHz ,8DIV.Frequency response with -3dB)	
	Rise time	Approx.17.5nS(x5 MAG:Approx.50nS)	Approx.8.75nS/8.0nS(x5MAG:Approx.50nS)
	Input impedance	Approx.1M ohm //Approx.25pF	
	Linearity	$\leq \pm 0.1$ DIV of amplitude change when waveform of 2 DIV at graticule center is moved vertically.	
	Vertical modes	CHI :CH1 single channel. CH2 :CH2 single channel. DUAL :CHI and CH2 are displayed.ALT or CHOP selectable at any sweep rate. ADD:CH1+CH2 algebraic addition.	
	Chopping repetition frequency	Approx.250KHz	
	Input coupling	AC,GND,DC	
	Maximum input voltage	400V (DC+AC peak),AC:frequency 1kHz or lower. When set probe switch at 1:1,the maximum effective readout is 160Vpp(56Vrms at sine wave), or set probe switch at 10:1,the maximum effective readout is 400Vpp(140Vrms at sine wave).	
	Common mode rejection ratio	50:1 or better at 50KHz sinusoidal wave.(When sensitivities of CH1 and CH2 are set equally)	
	Isolation between channels (At 5mV/DIV range)	$> 1000:1$ at 50KHz $> 30:1$ at 15MHz	$> 30:1$ at 35MHz/45MHz
CH 1 signal output	At least 20 mV/DIV into a 50 ohm termination.Bandwidth is 50Hz to at least 5MHz.		
CH 2 INV BAL.	Balanced point variation: ≤ 1 DIV(Reference at center graticule.)		

(Table one continue)

SPECIFICATIONS		MODEL	20MHz OSCILLOSCOPE	40MHz/50MHz OSCILLOSCOPE
			620B/5620NF/620BF/620R	640B/650B/640BF/650BF/640R/650R
TRIGGERING	Triggering source	CH1,CH2,LINE,EXT(CH1 and CH2 can be selected only when the vertical mode is DUAL or ADD. In ALT mode,if the TRIG.ALT switch is pushed in,it can be use for alternate tiggering of two different source.		
	Coupling	AC:20Hz to full bandwidth		
	Slope	+/-		
	Sensitivity.	20Hz~2MHz:1.0DIV;TRIG-ALT:2 DIV;EXT:200mV		
		2~20MHz:1.5DIV		2~20MHz:1.5DIV 20-40MHz:2.5DIV 40~50MHz:3DIV
		TRIG-ALT:3DIV,EXT:800mV		
		TV:Sync pulse more than 1 div(EXT:1V)		
	Triggering modes	AUTO:Sweeps run in the free mode when no triggering input signal is applied. (Applicable for repetitive signals of frequency 25Hz or over.) NORM:When no triggering signal is applied,the trace is in the ready state and not displayed. TV-V:This setting is used when observing the entire vertical picture of television signal. TV-H:This setting is used when observing the entire horizontal picture of television signal. (Both TV-V and TV-H synchronize only when the synchronizing signal is negative)		
	EXT triggering signal input	Approx. :1M ohm//approx.25pF		
Input impedance	400V(DC+AC peak),AC:Frequency not higher than 1KHz			
Max.input voltage	0.2 uSec~0.5Sec/DIV,20steps in 1-2-5 sequence			
Sweep time	+/-3% (10° C-35° C)			
Sweep time accuracy	≤1/2.5 of panel-indicated value			
Vernier sweep time control	10 times			
Sweep magnification	+/-5% (20nSec~50nSec are uncalibrated)			
x10MAGsweep time accuracy	+/-5% ,x10MAG: +/-10% (0.2s and 1μs)			
Linearity	Within 2 DIV.at CRT screen center			
Position shift caused by x10MAG	Same as vertical axis.(X-axis:CH1 input signal; Y-axis:CH2 input signal.)			
Sensitivity	DC to at least 500KHz			
Frequency bandwidth	≤3° at DC~50KHz			
X-Y phase difference				

3

Table one continue

SPECIFICATIONS		MODEL	20MHz OSCILLOSCOPE	40MHz /50MHz OSCILLOSCOPE
			620B/5620NF/620BF/620R	640B/650B/640BF/650BF/640R/650R
Z AXIS	Sensitivity	5Vp-p(Positive-going signal decreases intensity)		
	Frequency bandwidth	DC~2MHz		
	Input resistance	Approx.47K ohm		
	Maximum input voltage	30V(DC+AC peak, AC frequency ≤ 1kHz)		
CALIBRATION VOLTAGE	Waveform	Positive-going square wave		
	Frequency	Approx. 1 kHz		
	Duty ratio	Within 48:52		
	Output voltage	2Vp-p ± 2%		
	Output impedance	Approx, 1 K ohm		
CRT	Type	6-inch rectangular type,internal graticule		
	Phosphor	P31		
	Acceleration voltage	Approx.2kV	Approx.12kV	
	Effective screen size	8x10 div(1 div=10mm(0.39in))		
	Graticule	Internal		
	Trace rotation	Provided		

Cursor measurement system

620R/640R/650R		
CURSOR READOUT FUNCTION	Cursor measurement Function	$\Delta V, 1/\Delta T, \Delta T$ P(t,V)
	Cursor resolution	1/25 DIV
	Effective cursor Range	Vertical: ± 3 div Horizontal: ± 4 div
	Panel setting	Vertical: V/DIV, AC/DC/GND, CH1, CH2, INV, ALT, CHOP, ADD
		Horizontal: TIME/DIV, x10MAG
		Trigger: Source, Slope, AUTO, NORM, TV-V/TV-H
Others: probe(x1/x10), X-Y		

Line Power Requirements

Voltage: AC 220V/240V $\pm 10\%$
(manufactory set)
Frequency: 50Hz or 60Hz
Power consumption :
Approx..40VA, 35W(max.)

Operating Environment

Indoor use
Altitude up to 2000 m
Ambient temperature:
To satisfy specifications: 10°C to 35°C (50°F to 95°F)
Maximum operating ranges: 0°C to 40°C (32°F to 104°F)
Relative humidity: 75% RH(max.) non Condensing
Installation Category II
Pollution degree 2

Accessories

Power cord----- 1
User manual----- 1
Probes----- 2

Mechanical Specifications

Dimensions : 310Wx150Hx455 D(mm)
Weight : Approx..8kg(17.6lbs.)

Storage Temperature & Humidity

-10°C to 70°C, 70%RH(maximum)

5

3. PRECAUTIONS BEFORE OPERATING THE OSCILLOSCOPE

3.1 Unpacking the Oscilloscope

The oscilloscope is shipped from the factory after being fully inspected and tested. Upon receiving the instrument, immediately unpack and inspect it for any damages that might have been sustained during transportation. If any sign of damage is found, immediately notify the bearer and/or the dealer.

3.2 Checking the Line voltage

These oscilloscopes will operate on AC 220V or 240V set by manufactory. Before connecting the power plug to an AC line outlet, make sure the voltage is correct corresponding to the line voltage. Note: the scilloscope may be damaged if it is connected to the wrong AC line voltage.



WARNING. To avoid electrical shock the power cord protective grounding conductor must be connected to ground.

Replace the required fuses shown below.

Line voltage	Range	Fuse
AC 220V	192~242	T 0.5A
		250V
AC 240V	216~266	T 0.5A
		250V



WARNING. To avoid personal injury, disconnect the power cord before removing the fuse holder

3.3 Environment

The normal ambient temperature range of this instrument is 0° to 40°C (32° to 104°F). Operation of the instrument above this temperature range may cause damage to the circuits.

Do not use the instrument in a place where strong magnetic or electric field exists, such fields may disturb the measurement.

3.4 Equipment Installation, and Operation

Ensure there is proper ventilation for the hole vents in the oscilloscope case.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

3.5 CRT Intensity

To prevent permanent damage to the CRT phosphor, do not make the CRT trace excessively bright or leave the spot stationary for an unreasonably long time.

3.6 Withstanding voltages of Input Terminals

The withstanding voltages of the instrument input terminals and probe input terminals are as shown in the following table.

Do not apply voltages higher than these limits. When set probe switch at 1:1, the maximum effective readout is 160Vpp (56Vrms at sine wave). When set probe switch at 10:1, the maximum effective readout is 400Vpp (140Vrms at sine wave).

Input terminal	Maximum input voltage
CH1, CH2, inputs	400V (DC+AC peak)
EXT TRIG IN input	400V (DC+AC peak)
Probe inputs	600V (DC+AC peak)
Z AXIS input	30Vpeak



CAUTION. To avoid instrument damage, do not exceed maximum input voltages. Maximum input voltages must have frequencies less than 1 KHz.

If an AC voltage which is superimposed on a DC voltage is applied, the maximum peak value of CH 1 and CH 2 input voltages must not exceed +or-300V. So for AC voltages with a mean value of zero volt the maximum peak to peak value is 600V.

7

Figure 4-1
620R/640R/650R Front Panel



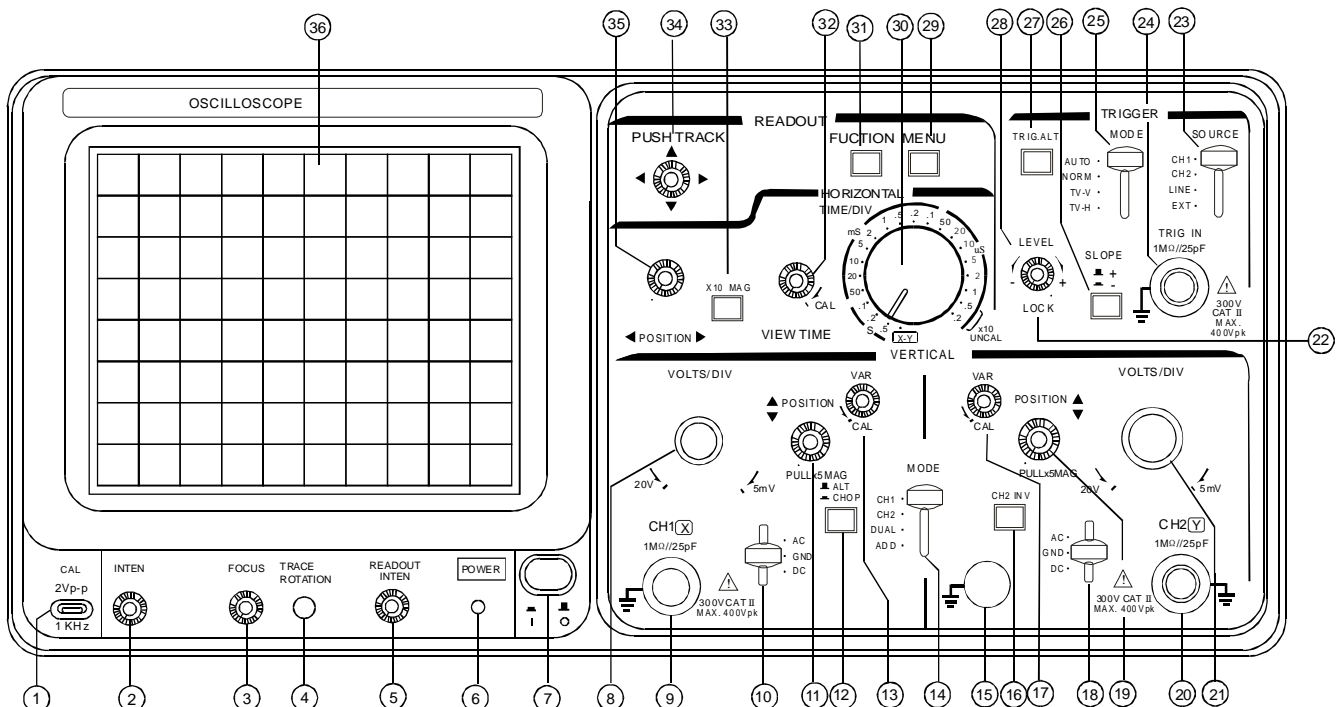


Figure 4-2
620B/640B/650B/5620NF/620BF/640BF/650BF Front Panel

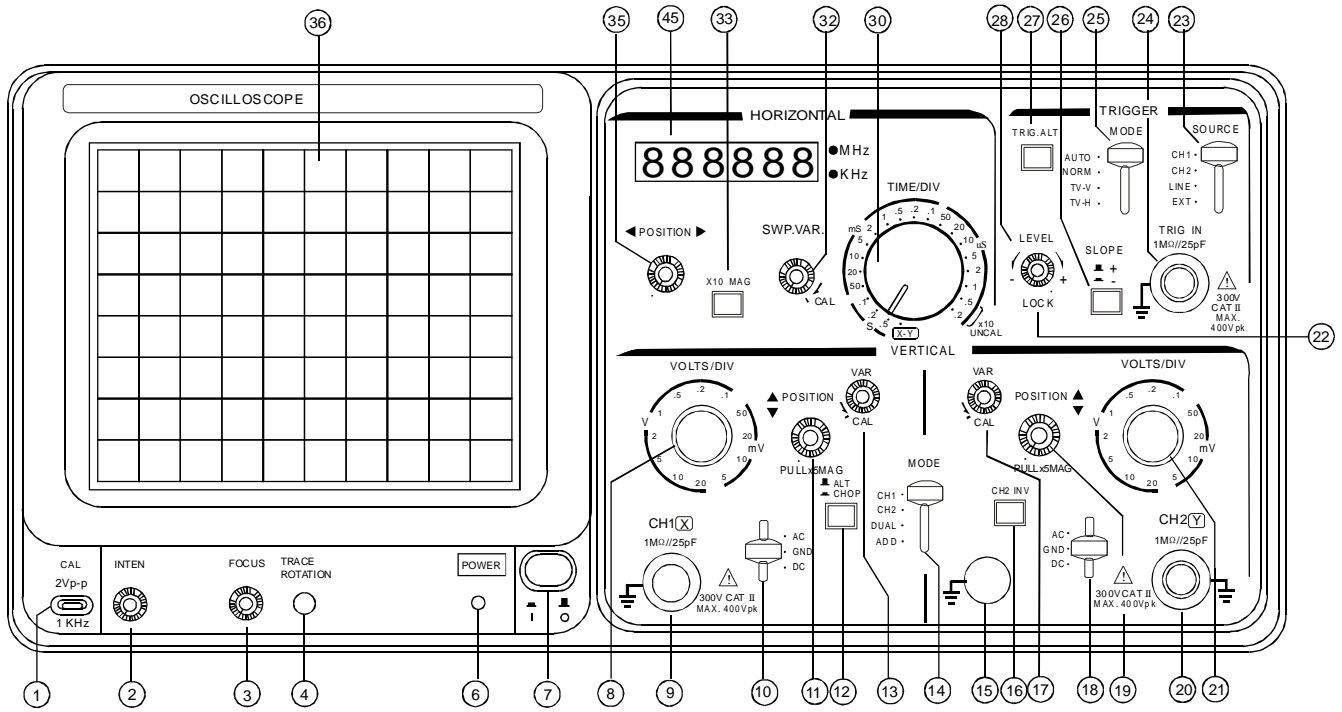

9

Figure 4-3
620R/640R/650R Rear Panel

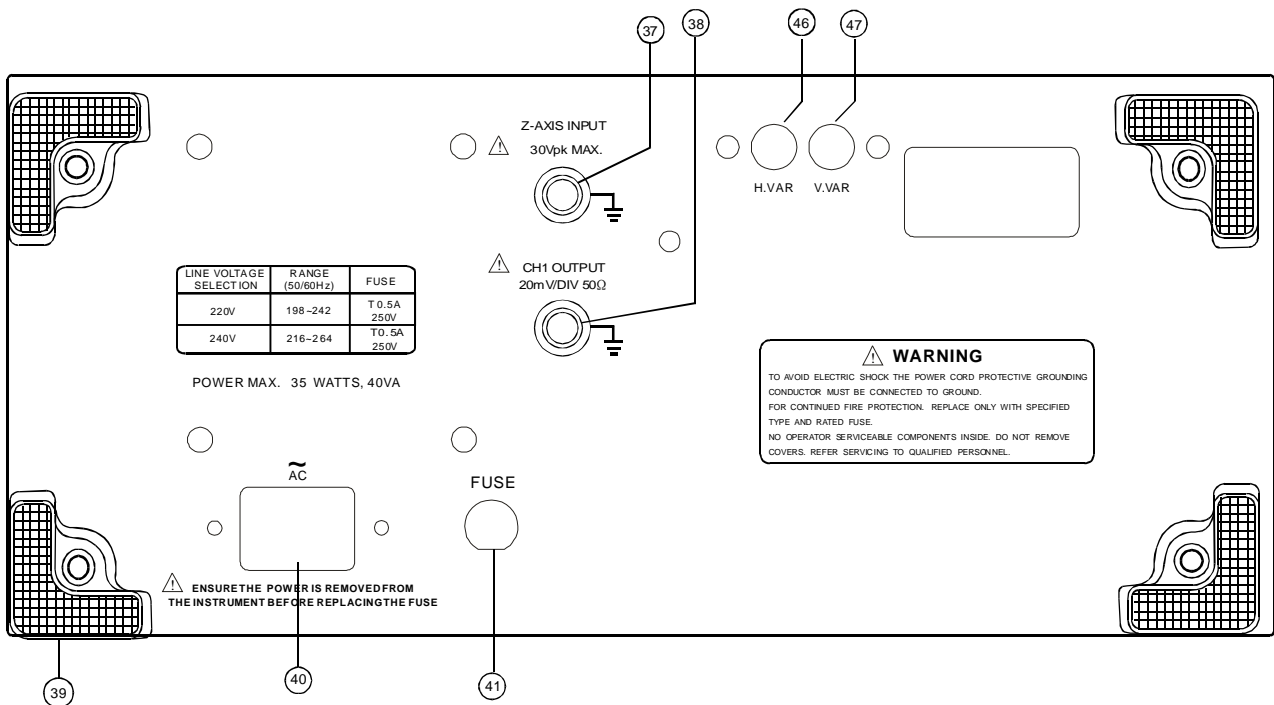

4. OPERATION METHOD

4.1 Introduction of Front Panel

CRT:.

POWER.....(7)

Main power switch of the instrument. When this switch is turned on, the LED (6) is also turned on.

INTEN.....(2)

Controls the brightness of the spot or trace.

FOCUS.....(3)

For focusing the trace to the sharpest image.

TRACE ROTATION.....(4)

Semi-fixed potentiometer for aligning the horizontal trace in parallel with graticule lines.

FILTER.....(36)

Filter for ease of waveform viewing.

Vertical Axis:

CH1(X)input..... (9)

Vertical input terminal of CH1. When in X-Y operation, X-axis input terminal.

CH2(Y)input..... (20)

Vertical input terminal of CH2. When in X-Y operation, Y-axis input terminal.

AC-GND-DC.....(10)(18)

Switch for selecting connection mode between input signal and vertical amplifier.

AC: AC coupling

GND: Vertical amplifier input is grounded and input terminals are disconnected.

DC: DC coupling

VOLTS/div.....(8)(21)

Select the vertical axis sensitivity, from 5mV/div to 20V/div in 12 ranges.

11

VARIABLE.....(13)(17)

Fine adjustment of sensitivity, with a factor of $>1/2.5$ of the indicated value. When in the CAL position, sensitivity is calibrated to indicated value.

▲▼ POSITION.....(11)(19)

Vertical positioning control of trace or spot. When this knob is pulled out (x5 MAG state), the amplifier sensitivity is multiplied by 5.

VERT MODE.....(14)

Select operation modes of CH1 and CH2 amplifiers.

CH1: The oscilloscope operates as a single-channel instrument with CH1 alone

CH2: The oscilloscope operates as a single-channel instrument with CH2 alone.

DUAL: The oscilloscope operates as a dual-channel instrument both CH1 and CH2.

ADD: The oscilloscope displays the algebraic sum (CH1+CH2) or difference (CH1 -CH2) of the two signals.

The pushed in state of CH2 INV(16) button is for the difference (CH1-CH2).

ALT/CHOR.....(12)

When this switch is released in the dual-trace mode, the channel 1 and channel 2 inputs are alternately displayed (normally used at faster sweep speeds).

When this switch is engaged in the dual-trace mode, the channel 1 and channel 2 inputs are chopped and displayed simultaneously (normally used at slower sweep speeds).

CH2 INV..... (16)

Inverts the CH2 input signal when the CH2 INV switch mode is pushed in. The channel 2 input signal in ADD mode and the channel 2 trigger signal pick off are also inverted.

Triggering:

EXT TRIG IN input terminal.....(24)

Input terminal is used for external triggering signal. To use this terminal, set SOURCE switch(23) to the EXT position.

SOURCE..... (23)

Select the internal triggering source signal, and the EXT TRIG IN input signal.

CH 1: When the VERT MODE switch (14) is set in the DUAL or ADD state, select CH1 for the internal triggering source signal.

CH2: When the VERT MODE switch (14) is set in the DUAL or ADD state, select CH2 for the internal triggering source signal.

LINE: To select the AC powerline frequency signal as the triggering signal.

EXT: The external signal applied through EXT TRIG IN input terminal(24) is used for the external triggering source signal.

SLOPE(26)

select the triggering slope.

"+": Triggering occurs when the triggering signal crosses the triggering level in positive-going direction.

"-": Triggering occurs when the triggering signal crosses the triggering level in negative-going direction.

TRIG.ALT.....(27):

When the VERT MODE switch (14) is set in the DUAL or ADD state, and the SOURCE switch(23) is selected at CH 1 or CH2, with the engagement of the TRIG . ALT switch(27), it will alternately select CH1 & CH2 for the internal triggering source signal.

LEVEL.....(28)

To display a synchronized stationary waveform and set a start point for the waveform.

Towards: "+": The triggering level moves upward on the display waveform.

Towards: "-": The triggering level moves downward on the display waveform.

13

LOCK.....(22)

click (28) by fully clockwise position, then triggering level is automatically maintained at optimum value irrespective of the signal amplitude, requiring no manual adjustment of triggering level.

TRIGGER MODE.....(25)

Select the desired trigger mode.

AUTO: When no triggering signal is applied or when triggering signal frequency is less than 25Hz, sweep runs in the free run mode.

NORM: When no triggering signal is applied, sweep is in a ready state and the trace is blanked out. Used primarily for observation of signal that frequency is less than 25Hz.

TV-V: This setting is used when observing the entire vertical picture of television signal.

TV-H: This setting is used when observing the entire horizontal picture of television signal.

(Both TV-V and TV-H synchronize only when the synchronizing signal is negative.)

Time Base

TIME/DIV(30)

Sweep time ranges are available in 20 steps from 0.2 us/div to 0.5 s/div.

X-Y: This position is used when using the instrument as an X-Y oscilloscope.

SWP. VAR(32)

Vernier control of sweep time. This control works as CAL and the sweep time is calibrated to the value indicated by

TIME/div of sweep can be varied continuously when Shaft is out of CAL position. Then the control is rotated in the direction of arrow to the full, the CAL state is produced and the sweep time is calibrated to the value indicated by TIME/DIV. Counterclockwise rotation to the full delays the sweep by 2.5 times or more.

◀▶ 'POSITION.....(35)

Horizontal positioning control of the trace or spot.

X10 MAG.....(33)

When the button is pushed in, a magnification of 10 occurs.

Others

CAL.....(1)

This terminal delivers the calibration voltage of 2 V p-p, approx 1kHz, positive square wave.

GND.....(15)

Ground terminal of oscilloscope mainframe.

FAMILY.....(45)

Display a synchronized signal frequency (models have this function only)

4.2 Introduction of Rear Panel

Z AXIS INPUT (37)

Input terminal for external intensity modulation signal.

CH1 SIGNAL OUTPUT..... (38)

Delivers the CH1 signal with a voltage of approximately 20mV per div into a 50-ohm termination. Suitable for frequency counting, etc.

STUDS.....(39)

For laying the oscilloscope on its back to operate it in the upward position. Also used to take up the power cord.

AC Power input connector(40)

AC Power input socket. Connect the AC power cord (supplied) to this connector.

FUSE.....(41)

Fuse rating is shown in Page 6.

15

4.3 Basic Operation--Single-channel Operation

Before connecting the power cord to an AC line outlet, make sure that the working voltage of the instrument is correct correspond to the AC line voltage. Set the switches and controls of the instrument as shown below:

Item	No	Setting	Item	No	Setting
INTEN	(2)	Mid-position	SLOPE	(26)	+
FOCUS	(3)	Mid-position	TRIG.ALT	(27)	Released
VERT MODE	(14)	Ch1	TRIGGER MODE	(25)	AUTO
ALT/CHOP	(12)	Released (ALT)	TIME/DIV	(30)	0.5mSec/DIV
POWER	(7)	Disengage position (OFF)	SWP.VER	(32)	CAL position
CH 2 INV	(16)	Released	◀▶ POSITION	(35)	Mid-position
▲▼ POSITION	(11)(19)	Mid-position	X10 MAG	(33)	Released
VOLTS/DIV	(8)(21)	0.5V/DIV	LEVEL	(28)	Locked
VARIABLE	(13)(17)	CAL (clockwise position)			
AC-GND-DC	(10)(18)	GND			
SOURCE	(23)	CH1			

After setting the switches and controls as mentioned, connect the power cord to the AC line outlet, and then continue as follows:

- 1) Engage the POWER switch and make sure that the power LED is turned on. In about 20 seconds, a trace will appear on the CRT screen. If no trace appears in about 60 seconds, counter check the switch and control setting.
- 2) Adjust the trace to an appropriate brightness and image with the INTEN control and FOCUS control respectively.

3)Align the trace with the horizontal center line of the graticule by adjusting the CH 1 POSITION control and TRACE ROTATION control(adjustable by screwdriver).

4)Connect the probe to the CH1 INPUT terminal and apply the 2Vp-p CALIBRATOR signal to the probe tip.

5)Set the AC-GND-DC switch to the AC state.A waveform as shown in the figure 4-4 Will be displayed on the CRT screen.

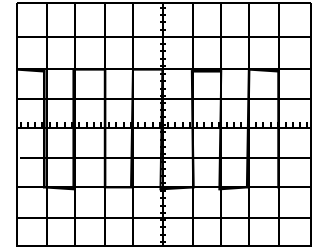


Figure 4-4

6)Adjust the FOCUS control so that the trace image appears sharply.

7)For signal viewing,set the VOLTS/DIV switch and TIME/DIV switch in appropriate positions so that signal waveform is displayed clearly.

8)Adjust the ▲▼POSITION and ◀▶POSITION controls in appropriate positions so that the displayed waveform is aligned with the graticule and voltage (Vp-p)and period (T)can be read conveniently.

The above are the basic operating procedures of the oscilloscope.It is for single-channel operation with CH1.Single-channel operation with CH 2 can also be achieved in a similar manner.Further operation methods are explained in the subsequent pages.

4.4 Dual-channel Operation

Change the VERT MODE switch to the DUAL states so that trace(CH2)is also Displayed (The explanation in the proceeding section is of CH1).At d1 is state of procedure,the CH 1 trace is the square wave of the calibrator signal and the CH 2 trace is a straight line since no signal is applied to this channel yet.

Now , apply the calibrator signal to the vertical input terminal of CH 2 with the probe as is the case for CH1.Set the AC-GND-DC switch to the AC state.Adjust vertical POSITION knobs (11)and (19)so that both channel signals are displayed as shown in Figure4 -5

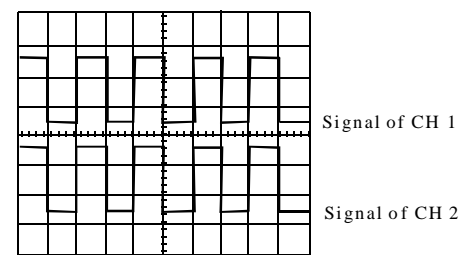


Figure 4-5

17

When ALT/CHOP switch is released (ALT MODE),the input signals applied respectively to CH 1 and CH 2 appears on the screen alternatively at each sweep. This setting is used when the sweep time is short in 2-channel observation.

When ALT/CHOP switch is engaged(CHOP MODE),the input signals applied to CH 1 and CH 2 are switched at about 250kHz independent of the sweep and at the same time appear on the screen. This setting is used when the sweep time is long in 2-channel observation.

When in the dual channel operation(DUAL or ADD mode),the CH 1 or CH 2 signal must be selected for the triggering source signal by means of the SOURCE switch. If both CH 1 and CH 2 signals are in a synchronized relationship, both waveforms can be displayed stationary; If not, only the signal selected by the SOURCE switch can be stationary. If the TRIG. ALT push switch is engaged, both waveforms can be displayed stationary.

4.5 ADD Operation

An algebraic sum of the CH1and CH 2 signals can be displayed on the screen by setting the VERTMODE switch to the ADD State. The displayed signal is the difference between CH1 and CH2 signals if the CH2 INV push switch is engaged.

For accurate addition or subtraction, it is a prerequisite that the sensitivities of the two channels are adjusted accurately at the same value by means of the VARIABLE knobs. Vertical positioning can be made with the ▲▼POSITION knob of either channel. In view of the linearity of the vertical amplifiers, it is most advantage to set both knobs in their mid-positions.

4.6 Triggering

Proper triggering is essential for efficient operation of an oscilloscope. The user must be thoroughly familiar with the triggering functions and procedures.

(1)Functions of MODE switch:

AUTO: When the AUTO switch is engaged, automatic sweep operation is selected. in automatic sweep operation, the sweep generator free runs to generate a sweep without a trigger signal. However, it automatically switches triggered sweep operation if an acceptable trigger source signal is present. The AUTO position is handy when first setting up the scope to observe a waveform; it provides sweep for waveform observation until other controls can properly set. Once the controls are set, operation is often switchen back to the NORM triggering mode, since it is more sensitive. Automatic sweep must be used for DC measurements an signals of such low amplitude that they will not trigger the sweep.

NORM:The NORM switch provides normal triggered sweep operation. The sweep remains at rest until the selected trigger source signal crosses the threshold level set by the TRIG LEVEL control. The trigger causes one sweep to be generated, after which sweep again remains at rest until triggered. In the NORM position, there will be no trace unless an adequate trigger signal is present. In the ALT mode of dual trace operation with NORM sweep selected, there will be trace unless both channel 1 and 2 signals are adequate for triggering.

TV-V:Setting the MODE switch to the TV-V position permits selection of vertical sync pulses for sweep triggering when viewing composite video waveforms. Vertical sync pulses are selected as trigger to permit viewing of vertical fields and frames of video. A sweep time of 2 ms/DIV is appropriate for viewing fields of video and 5ms/DIV for complete frames (two interlaced fields) of video.

TV-H:Setting the MODE switch to the TV-H position permits selection of horizontal sync pulses for sweep triggering when viewing composite video waveforms. Horizontal sync pulses are selected as trigger to permit viewing of horizontal fields of video. A sweep time of about 10us/DIV is appropriate for displaying lines of video. The SWP VAR control can be set to display the exact number of waveforms desired.

This oscilloscope synchronizes with only (-) polarity, that is, the sync pulses are negative and the video is positive as shown in Figure 4-6.

(2) Functions of SOURCE switch:

The displayed signal itself or a trigger signal which has a time relationship with the displayed signal is required to be applied to the trigger circuit to display a stationary signal on the CRT screen.

The SOURCE switch is used for selecting such a triggering source.



Figure 4-6

CHI/CH2: The internal trigger method which is used most commonly. The signal applied to the vertical input terminal is branched off from the preamplifier and is fed to the trigger circuit through the VERT MODE switch. Since the triggering signal is the measured signal itself, a stable waveform can be readily displayed on the CRT screen. When in the DUAL or ADD operation, the signal selected by the SOURCE switch is used as the triggering source signal.

19

Line: The AC power line frequency signal is used as the triggering signal. This method is effective when the measured signal has a relationship with the AC line frequency, especially for measurements of low level AC noise of audio equipment, thyristor circuits, etc.

EXT: The sweep is triggered with an external signal applied to the external trigger input terminal. An external signal which has a periodic relationship with respect to the measured signal is used. Since the measured signal is not used as the triggering signal, the waveforms can be displayed more independent than the measured signal.

(3) Functions of TRIG LEVEL control and SLOPE switch:

A sweep trigger is developed when the trigger source signal crosses a preset threshold level. Rotation of the TRIG LEVEL control varies the threshold level. In the "+" direction, the triggering threshold shifts to a more positive value, and in the "-" direction, the triggering threshold shifts to a more negative value. When the control is centered, the threshold level is set at the approximate average of the signal used as the triggering source.

The TRIG LEVEL control adjusts the start of the sweep to almost any desired point on a waveform. On sine wave signals, the phase at which sweep begins is variable. Note that if the TRIG LEVEL control is rotated toward its extreme + or - setting, no sweep will be developed in the NORM trigger mode because the triggering threshold exceeds the peak amplitude of the sync signal.

When the TRIG SLOPE switch is set to the (+) position (up), the sweep is developed from the trigger source waveform as it crosses the threshold level in a positive-going direction. When the TRIG SLOPE control is set to the (-) position (down), a sweep trigger is developed from the trigger source waveform as it crosses the threshold level in a negative-going direction. This switch selects the slope (polarity) triggering signal as shown in Figure 4-7.

TRIG LEVEL LOCK

Adjust level (28) to fully clockwise, the triggering level is locked at a fixed value, and stable triggering is made without requiring level adjustment.

This Trigger level lock function is effective when the signal amplitude on the screen or the input voltage of the external triggering signal is within the following range:

620B/5620NF/620BF/620R:	640B/650B/640BF/650BF/640R/650R:
50Hz -- 2MHz: ≥ 1.0 DIV	50Hz-- 20MHz: ≥ 1.5 DIV
2MHz -- 20MHz: ≥ 2 DIV	20MHz--50MHz : ≥ 3 DIV

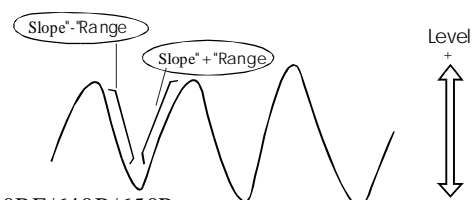


Figure 4-7

(4)Function of TRIG ALT switch:

The TRIG ALT switch is used to select alternate triggering and alternate display when the DUAL-trace VERT MODE is Selected (the switch has on effect in the CH1,CH2,or ADD modes).In the alternate triggering mode (when dual-trace operation is selected),the trigger source alternates between channel 1 and channel 2 with each sweep.This is convenient for checking amplitudes,wave shape,or waveform period measurements,and even permits simultaneous observation of two waveforms which are not related in frequency or period.However,this setting is not suitable for phase or timing comparison measurements.For such measurements,both traces must be triggered by the same sync signal.

When the CHOP and the TRIG ALT switches are both engaged during dual-trace operation, synchronization of the display is not possible because the chopping signal becomes the trigger.Use the ALT mode by itself, or select CH1 or CH2 as trigger source.

4.7 TIME/DIV Control

Set the TIME/DIV control to display the desired number of cycles of the waveform.If there are too many cycles displayed for good resolution,switch to a faster sweep speed.If only a line is displayed, try a slower sweep speed.When the sweep speed is faster than the waveform being observed,only part of it will be displayed,which may appear as a straight line for a square wave or pulse waveform.


4.8 Sweep Magnification

When a certain part of the displayed waveform is needed to be expanded time wise,a faster sweep speed may be used.However,if the required portion is apart from the starting point of the sweep, the required portion may run off the CRT screen. In such a case, push in the x10 MAG button. When this has been done, the displayed waveform will be expanded 10 times to the right and left with the center of screen as the center of expansion. The sweep time during the magnification operation is as follows:

(Value indicated by TIME/DIV switch $\times 1/10$)

Thus, the unmagnified maximum sweep speed (1 μ sec/DIV) can be increased with the magnification as follows:

$$1 \mu\text{sec/DIV} \times 1/10 = 100 \text{nsec/DIV}$$

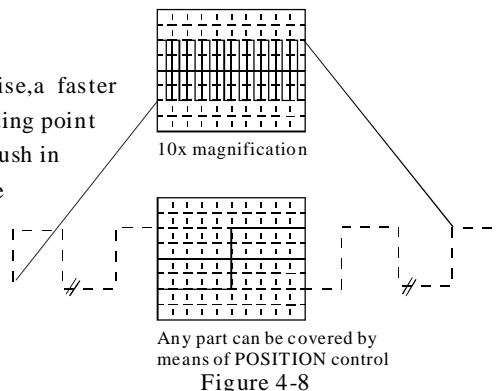


21

4.9 X-Y Operation

Set the TIME/div switch to X-Y position. Then the instrument works as an X-Y oscilloscope. Each input is applied to the instrument as follows.

X-axis signal (horizontal axis signal): CH1 INPUT

Y-axis signal (vertical axis signal): CH2 INPUT.

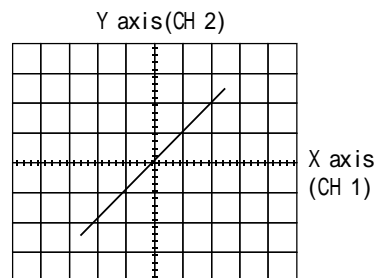

Note: When high frequency signals are displayed in the X-Y operation, pay attention to the frequency bandwidths and phase difference between X and Y-axis.

X-Y operation permits the oscilloscope to perform many measurements not possible with conventional sweep operation. The CRT display becomes an electronic graph of two instantaneous voltages. The display may be a direct comparison of the two voltages such as a vectorscope display of video color bar patterns. However, the X-Y mode can be used to graph almost any dynamic characteristic if a transducer is used to change the characteristic (frequency, temperature, velocity, etc.) into a voltage. One common application is frequency response measurements, where the Y-axis corresponds to signal amplitude and the X-axis corresponds to frequency.


1. Set the TIME/div control to the X-Y position (fully counterclockwise). In this mode, channel 1 becomes the X-axis input and channel 2 becomes the Y-axis input.
2. The X and Y positions are now adjusted using the horizontal ◀▶ POSITION and CH2 ▲▼ POSITION controls respectively.
3. Adjust the amount of vertical (Y-axis) deflection with the CH2 VOLTS/DIV and VAR controls.
4. Adjust the amount of horizontal (X-axis) deflection with the CH1 VOLTS/DIV and VAR controls.

4.10 Calibration of Probe

As explained previously, the probe makes up a wide range attenuator. Unless phase compensation is properly done, the displayed waveform is distorted causing measurement errors. Therefore, the probe must be properly compensated before use.

Connect the 10:1 probe BNC to the INPUT terminal of CH1 or Ch2 and set VOLTS/DIV switch at 50mV. Connect the probe tip to the calibration voltage output terminal and adjust the compensation trimmer on probe for optimum square wave (minimum overshoot, rounding off and tilt).

Figure 4.10

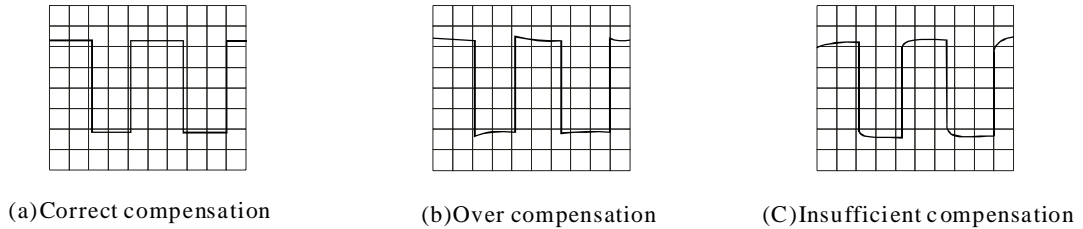

23

5. Cursor Readout Operation

The Oscilloscopes 620R/640R has a cursor measurement system for making accurate, direct-readout voltage, time, and frequency measurements. This method allows you to take measurements by moving the cursors, which always appear in pairs and reading their different values from the display readout.

5.1 Read Out Panel (see Fig.4-1)

34) PUSH-TRACK: This push-tuning button has two functions: tuning and pushbutton. Push the PUSH-TRACK button to select measurement cursor. The selected cursor will have a "▽" accompany with it. Tuning the knob to place the cursor to where you want.

↔ Horizontal ↑ vertical; While in P(t,V) mode, Pushing pushbutton to change moving direction, Tuning the knob to place the cursor.

31) FUNCTION: Function select button, While in READOUT ON and P(t,V) OFF mode, Briefly pushing this button to select the measurement function in the sequence as below:

△ T----1/△ T---- △ V---- △ T

△ T: Time difference measurement

1/△ T: Frequency measurement

V: Voltage difference measurement

While in P(t,V) ON mode, Push and tuning this button to place the coordinate and the point that you want to measure.

While in MENU mode, push this button to change parameters state.

For instance: ON/OFF, x1/x10 and Quit from Menu mode.

29) MENU Push Menu button to see the menu list as below. Each time when the pushbutton is briefly pressed the five measurement parameters will be selected in the sequence as follow:

CH 1-CH 2-P(t,V)-READOUT-QUIT

Use Function button to change the parameters from x1 to x10 or ON to OFF.


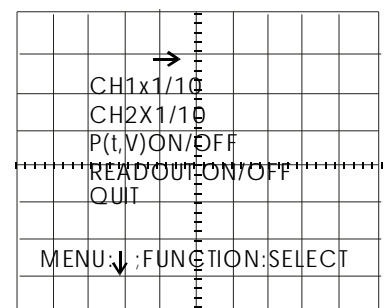


Fig.5-1

5) READOUT INTEN: This control knob is used for adjusting the readout intensity.

5.2. Cursor measurement

Location of Readout parameters and display information is illustrated as below:

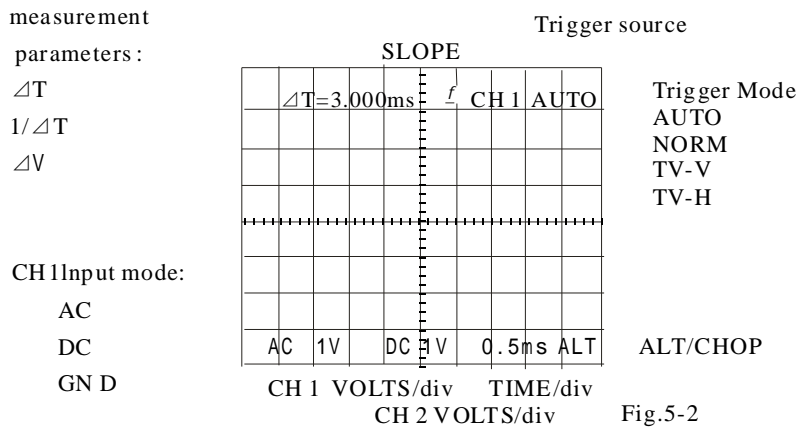

5.2.1 CRT readout measurement

In the CRT readout measurement mode, each time when the FUNCTION pushbutton is briefly pressed the measurement functions will be selected in the sequence as follows:

ΔT --- $1/\Delta T$ --- ΔV --- ΔT

Set the panel control VOLTS/div and TIME/div at reasonable position and make sure the READOUT parameter in MENU is ON. (Default is ON when power on.)

25

5.2.1.1 ΔT measurement (See Fig.5-3)

- Repeat pushing Function button till ΔT appeared on the Up-Left corner of CRT accompany with two vertical dash bar.
- Tuning PUSH-TRACK knob place the cursor-1 (marked by ∇) to the start point of waveform that you want to measure.
- Push PUSH-TRACK pushbutton to select cursor-2 (cursor-2 marked by ∇ this time)
- Tuning PUSH-TRACK knob place cursor-2 to the end point of waveform. read the ΔT value displayed on CRT.

NOTE: If the SWEEP VARY is unlocked (TIME/div is un-calibrated), it will display a ">" before value of TIME/div, then the ΔT represent the difference div value between cursor-1 and cursor-2.

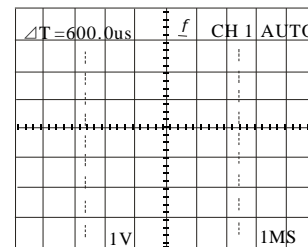


Fig.5-3

5.2.1.2.1 $1/\Delta T$ measurement (See Fig.5-4)

Same as ΔT measurement, but CRT display $1/\Delta T$ instead of ΔT by push FUNCTION button

NOTE: If the SWEEP VARY is unlocked (TIME/div is un-calibrated), then the $1/\Delta T$ means nothing, CRT will display $1/\Delta T=?$

If cursor-1 and cursor-2 overlapped, $\Delta T=0$, then the value of $1/\Delta T$ is going to be infinite. CRT display $1/\Delta T=?$

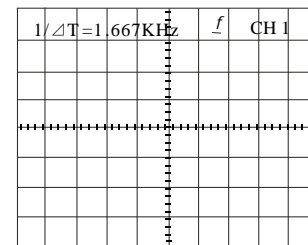


Fig.5-4

5.2.1.3. ΔV measurement (See Fig.5-5)

- Repeat push Function button till ΔV appeared on the Up-left corner of CRT, accompany with two horizontal dash bar.
- Tuning PUSH-TRACK knob to place the cursor 1 (marked by ∇) to the start point of waveform that you want measure voltage difference.
- Push PUSH-TRACK pushbutton to select cursor 2 (cursor-2 marked by ∇)

- d. Tuning PUSH-TRACK knob to place cursor 2 to the end point of waveform. read the ΔV value displayed on CRT.
- e. Push PUSH-TRACK again to select cursor 1 and cursor 2 (Both of them marked by ∇) tuning PUSH-TRACK knob

Place two cursor to the area where you want measure the Voltage difference.

Note: 1) When in single channel mode, ΔV represent as $\Delta V1$ or $\Delta V2$ depends on which channel was be selected.

2) When working in double channel mode, ΔV is locked on $\Delta V1$ only.

NOTE: When the VOLTS/div controls are un-calibrated setting, the ΔV measurement values will be displayed with divisions. There is a ">" just before value of VOLTS/div.

When the vertical mode is set to the ADD mode, if the CH 1 and CH 2 VOLTS/div control are set to different scales, the measurement results have no actual meaning, it will display $\Delta V=?$

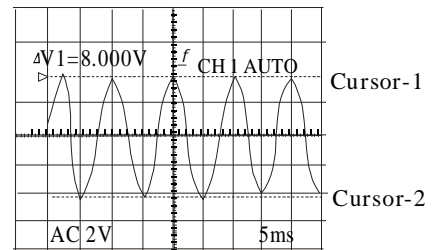


Fig.5-5

5.2.2 Menu Use (Fig.5 - 6)

5.2.2.1 Set the probe attenuation rate

- a. Push Menu key to see menu list
- b. Push Menu key again to select channel.
- c. Use FUNCTION pushbutton to set the attenuation rate
- d. Push MENU key to QUIT, press FUNCTION pushbutton quit the menu.

5.2.2.2 READOUT ON/OFF

- a. Push Menu Key to see menu list
- b. Push Menu Key to select READOUT ON/OFF option.
- c. Press FUNCTION pushbutton to select READOUT ON or OFF (Default is on)
- d. Push MENU key to QUIT, press FUNCTION pushbutton quit the menu.

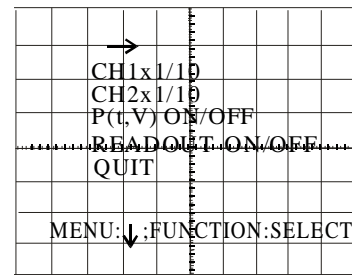


Fig.5-6

NOTE: When READOUT is OFF, only have VOLTS/div of CH 1/CH 2 and AC, GND, DC is displayed. All other information is turn off.

27

5.2.3 P(t,v) measurement (Fig.5-7)

- a. Push MENU key enter menu list mode
- b. Push MENU key to P(t,V) ON/OFF option
- c. Push FUNCTION button turn P(t,V) ON
- d. Push MENU key to QUIT, Push FUNCTION button quit the menu mode.
- e. A cross with arrow "→" displayed on CRT, it represent the cursor movement direction. "←" means horizontal; "↑" means vertical. Push PUSH-TRACK button change move direction. Tuning PUSH-TRACK to place the cursor to where you want. Push FUNCTION button, the marker changed to "+". This point has been defined as coordinate origin. All the following measurement will take this point as reference.

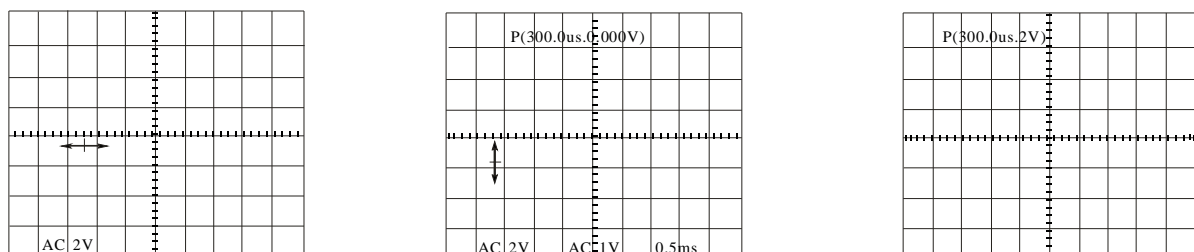


Fig.5.7

- f. After set up coordinate origin, Tuning PUSH-TRACK knob to place cursor to the point of measure waveform, then the P(t,V) displayed on the Up-left corner,
- g. After finished P(t,V) measurement, Push MENU to P(t,Y) ON/OFF option.
- h. Push FUNCTION button to turn P(t,V) OFF,
- i. Push MENU button to QUIT, then Push FUNCTION quit of Menu list.

5.2.4 Frequency measurement

620R/640R/650R has built in frequency account, it can read frequency directly. The value of frequency displayed in the bottom-right corner.

1. In case of confused results, set TRIG ALT (27) at "out" position.

2. Single Channel:

Set the Vert MODE (14) to CH1 or CH2, then set Trigger source (23) to the related position. Tuning Trigger Level knob until one stable and synchronized waveform displayed on the screen, then the frequency value of f1 or f2 that appeared on the bottom of right corner.

3. Double channel:

Set the Vert MODE (14) to DUAL, then set Trigger Source (23) to related position, Tuning Trigger Level knob until receive one stable and synchronized waveform, then the value of f1 or f2 appeared on the bottom of right corner is the measured frequency.

4. Line frequency,

Set Trigger Source (23) to LINE, the frequency will represent as fL.

5. External Synchronize signal:

Set Trigger Source (23) to EXT, the frequency will represent as fE.

6. Frequency measurement range:

20Hz~20MHz (5620NF/620BF/620R)

20Hz~40MHz (640BF/650BF/640R/650R)

NOTE: As the magnetic field effecting, CRT readout characters may move out of screen, in this station the readout position adjustment is required.

④7 V.VAR Vertical adjusting;

④6 H.VAR Horizontal adjusting

Adjust above two potentiometers move the readout characters to the screen center. These two potentiometer located on the CRT readout board.

29

6. MAINTENANCE

WARNING

The following instructions are for use by qualified personnel only. To avoid electrical shock, do not perform any servicing other than in the operating instructions unless you are qualified to do so.

6.1 Fuse Replacement

If the fuse blows, the power lamp indicators will not light and the oscilloscope will not operate. The fuse should not normally open unless a problem has developed in the unit. Try to determine and correct the cause of the blown fuse. The replace only with a fuse of the correct rating and type (see page 6)

The fuse is located on the rear panel (see fig. 4-3).



WARNING For continued fire protection. Replace fuse only with 250V fuse of the specified type and rating, and disconnect power cord before replacing fuse.


6.2 Cleaning

To clean the oscilloscope, use a soft cloth dampened in a solution of mild detergent and water. Do not spray cleaner directly on to the oscilloscope because it may leak into the cabinet and cause damage.

Do not use chemicals containing benzene, benzene, toluene, xylene, acetone, or similar solvents.

Do not use abrasive cleaners on any portion of the oscilloscope.

7. BLOCK DIAGRAM

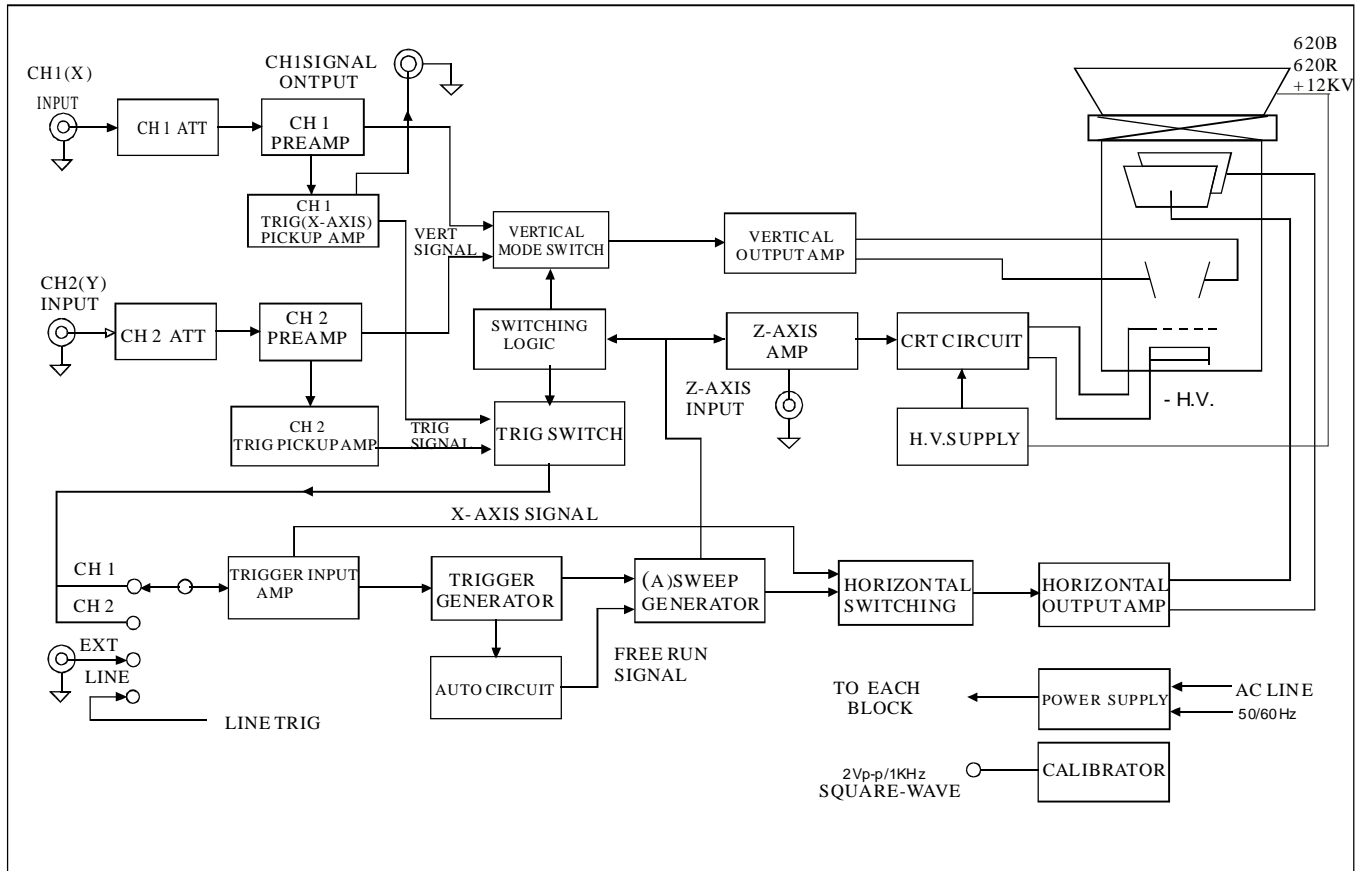

31

Specifications are subject to change without notice.